

Technical Data	Battery Specification: Li-ion Battery, 3.7V.  Please charge the battery when the motor alarm beeps or motor fails to turn the blind.  RF SWITCH LED SETTING BUTTON CHARGING PORT  Remote Control						
Operation	Step	Operation	Result	Illustration			
	PLEASE SKIP STEP ONE AND GO TO THE STEP TWO IF THE MANUFACTURER HAS PROGRAMMED A REMOTE WITH A MOTOR BEFORE DELIVERY.						
Pairing remote control with motor	1	Press and hold down the <b>SETTING</b> button on the motor.	Release this button when the LED flashes red.				
	2	Press the <b>CONFIRM</b> button on the back of the remote control	When the LED flashes green the remote will now been paired with the motor				
Changing motor rotation direction	1	Press  button and the  button at the same time to change the motor direction	Release both buttons when the Green LED flashes. The direction will now be reversed	© © © © © © © © © © © © © © © © © © ©			
	THE WHOLE LIMIT SETTING MUST BE FINISHED AT ONE TIME						
Set up tilt range	1	Press and hold <b>LIMIT</b> button on the back of the remote	Release the button when the Red LED flashes on the motor				
	2	Motor turns in a clockwise direction and stops when you reach the end	Red LED flashes				
	3	Motor turns in a anticlockwise direction and stops when it reaches the end	Red LED flashes. Now the limit settings have been done for both ways	3			

Operation	Step	Operation	Result	Illustration	
Program a second remote with an already programmed remote	1	Press and hold the  LIMIT button on the first programmed remote A then press the CONFIRM button	Release both buttons when the Red LED flashes		
	2	Now press the <b>CONFIRM</b> button on remote B	Green LED flashes, now all programmed remotes have been detected	1 2	
Delete all remotes	1	Press <b>SETTING</b> button on the motor 3 times	Green LED flashes, now all programmed remotes have been deleted		
Delete one remote from the motor	2	Press CONFIRM button 2 times on the back of the remote	Green LED flashes, now the remote has been deleted from the motor		
Charging	The motor works with Li-ion battery, please charge it when the motor alarms or work are faltering. Please charge the motor using a professional charger DC5V. Charging time: Charge for 6 hours or when the indicator turns Green.  Please remove the charger once it's full.				
FAQ	If nothing works then please check the following:  - Make sure you change the motor battery first.  - If the motor continues to turn continuously, the user hasn't setup the limit successfully. You will need to re-set the limit.				