 


R1705/R1706
programming instructions
SET-UP AND OPERATION

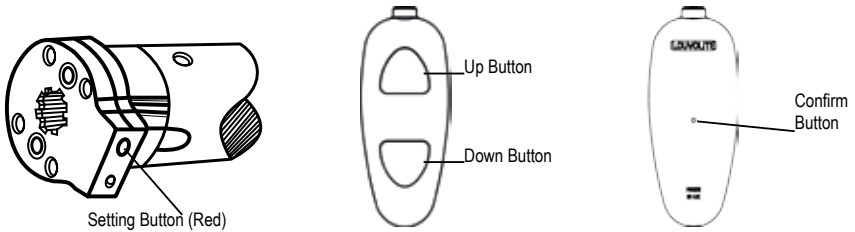

MOTOR TORQUE/SPEED: 0.7NM/34RPM

- Motor is combined with a wired switch and powered by a battery wand.
- The side of the motor mount with the SETTING button should face you.
- Please replace batteries when the motor alarm sounds

OPERATION

1. Press the red setting button on the motor until the motor beeps 6 times
2. Check the motor direction by pressing UP or DOWN on the switch
3. If correct then proceed to set-up lower limit, if incorrect change the motor direction by pressing the CONFIRM button 6 times on the wand control and the motor will beep 2 times changing the direction of the blind



SET-UP LOWER LIMIT

1. Press DOWN button on the wand control to lower the blind to the desired level and then press DOWN button again to stop the blind.
2. Press DOWN button repeatedly to adjust the blind level more accurately, then press CONFIRM button and the motor will beep once to set the lower limit.


SET-UP UPPER LIMIT

1. Press UP button on the wand control to lower the blind to the desired level and then press UP button again to stop the blind.
2. Press UP button repeatedly to adjust the blind level more accurately, then press CONFIRM button and the motor will beep once to set the lower limit.




CHANGE MOTOR DIRECTION

1. Press CONFIRM button on the wand control 6 times the motor will beep twice to indicate the direction of the blind has changed.

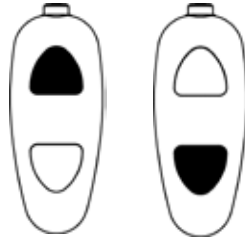

TO RAISE THE BLIND

1. Press UP button once on the wand control to raise the blind to the upper limit.
2. Press the DOWN button on the wand control to stop the blind at desired position.

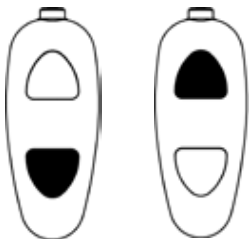

TO LOWER THE BLIND

1. Press DOWN button once on the wand control to lower the blind to the lower limit.
2. Press the UP button on the wand control to stop the blind at desired position.



RESET

1. Press and hold UP and Down button together on the wand control for 10 seconds and the motor will jog.