

R1722 14 CHANNEL REMOTE CONTROL

FOR USE WITH R1710 MOTOR


programming instructions

SET-UP AND OPERATION

technical data

BATTERY SPECIFICATION: Li-ion battery, 2000mAH, 7.4V.

MOTOR TORQUE/SPEED: 1.1Nm/25rpm

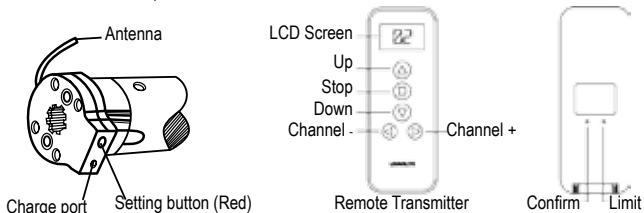

LCD SCREEN ILLUSTRATION





Remote is for use for up to 14 blinds

Channel No.



SINGLE GROUP SETTING

To select Number of Channels (if less than 14)

 



1. Press and hold both Up  and Down  buttons for 3 seconds until 00 Channel displays. Release the buttons and the 00 will start to flash.

 



 
2. Press the Up  or Down  button to select the required number of channels between (1-14).



3. Press and hold  or  at the same time for 3 seconds to confirm selection.

SWITCHING BETWEEN SINGLE GROUP AND MULTI-GROUP

Press and hold Up  & Down  button then press and hold LIMIT for 5 seconds. Group number will display for Multi-Group.



MULTI-GROUP SETTING

Two-Group Setting

Repeat steps 1 & 2 for Group 1 Channel Selection. Skip step 3.



4. Press to enter second group number of channels.



5. Press the Up or Down button to select the required number of channels (between 1-14)



6. If you only need 2 groups press and hold and at the same time for 3 seconds to confirm selection. To set 3 groups repeat steps 4 & 5 and then press and hold and at the same time for 3 seconds to confirm selection.

PLEASE NOTE: The group channel will be recorded on the motor automatically when the single channel has been programmed on the motor. This will display as (AL) on the remote handset.

SETTING UP THE MOTOR


- The side of the motor mount with the SETTING button should face you.
- The motor antenna should be as straight as possible; otherwise the receiving distance will be reduced.
- Charging - The motor works with a Li-ion battery, please charge when the motor stops working or falters please charge the motor by using the charger. Charging time with the charger is 5 to 6 hours. Please do not leave the motor on permanent charge as this will reduce battery performance.

NOTE: On receiving the motor we recommend fully charging.

MOTOR ASSEMBLY




- Remove grease protector ring by opening the split ring and sliding off the motor body
- Fit crown by opening the split ring and slide along the motor body until it meets the motor head.
- Fit the drive using the cir-clip to secure in position.
- Attached motor plate with the screws supplied in either left hand or right hand orientation as required.

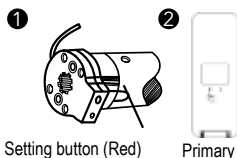

Setting button (Red)

Primary

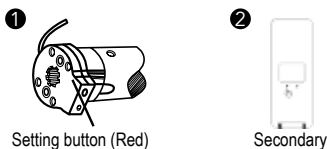

Setting button (Red)


Secondary

PAIRING THE REMOTE WITH THE MOTOR

1. Select the channel for the blind using the or button.
2. Hold down the SETTING button on the motor until it jogs 2 times and then release the button.
3. Press the CONFIRM button within 10 seconds. The motor will jog 2 times and the remote is now paired with the motor.


PAIRING AN ADDITIONAL REMOTE WITH THE MOTOR

1. Hold down the SETTING button on the motor until it jogs 2 times and then release the button.
2. Press the CONFIRM button within 10 seconds. The motor will jog 2 times and the remote is now paired with the motor.

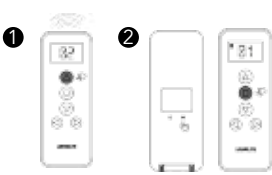

CHANGE MOTOR DIRECTION

1. Press Up (▲) button on the remote, if the blind goes up then the motor direction is okay.
2. To change the motor direction hold down the LIMIT button and then press Stop (■) button on the remote transmitter, the motor will jog 2 times to indicate the direction has been changed.

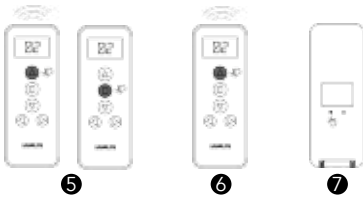

SET-UP UPPER LIMIT

5. Press Up (▲) button on the remote to move the blind up and press Stop (■) when desired upper limit is reached.
6. Press Up (▲) or Down (▼) button and the motor will run in steps to set the upper limit accurately.
7. Press Confirm button on the remote and the motor will jog 2 times, the upper limit is set.

PLEASE NOTE: The group channel will be recorded on the motor automatically when the single channel has been programmed on the motor. Cycle through the channels until all the lights are lit to access the group channel on the remote.




DELETE MID-POINT LIMIT

11. Press Up (▲) or Down (▼) button on the remote to send blind to upper or lower limit.
12. Press and hold Limit button first then whilst holding Limit press Up (▲) on the remote until the motor jogs. Mid-point is now deleted.


FAQ: IF THE MOTOR DOES NOT WORK

- Please charge the motor battery first.
- If the motor does not stop at the required point, then the stops must be reset.

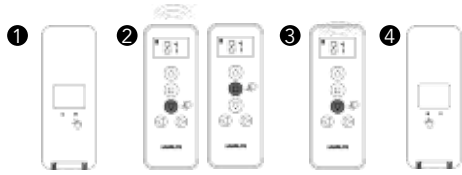


SET-UP LOWER LIMIT

1. Press and hold the Limit button on the remote until the motor jogs 4 times and then release the button.
2. Press Down (▼) button on the remote to move the blind down and press Stop (■) when desired lower limit is reached.
3. To set the lower limit more accurately press Up (▲) or Down (▼) and the motor will run in steps to set up the lower limit accurately.
4. Press CONFIRM button on the remote and the motor will jog 2 times, the lower limit is set.

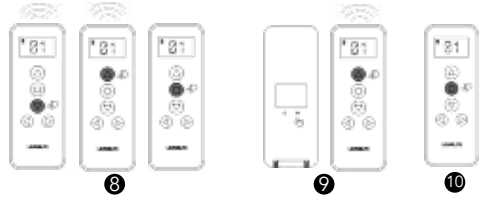

SET-UP MID-POINT LIMIT

8. Press Up (▲) or Down (▼) button on the remote to move the blind up and press Stop (■) when desired mid-point limit is reached.
9. Press and hold the Limit button first then whilst holding Limit press Up (▲) button on the remote until the motor jogs 2 times. Mid-point is now set.
10. Press Stop (■) to move the blind to Mid-point position.

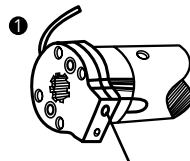

Setting button (Red)

DELETE ORIGINAL HANDSET ON MOTOR

1. Press and hold Setting button on the motor mount and the motor will jog (4 times in one motion) and then release the button.

ATTACHING THE SOLAR PANEL

- Make sure the motor has enough charge to operate the blind.
- Attach the solar panel to the charge port on the motor using the 1.4m charge cable.
- Place/ fix the solar panel so that it is facing direct sunlight.

